

ACCESSORIES

IR REMOTE CONTROL WATERPROOF

Learnable IR remote control WATERPROOF for the control of ad notam DFU monitor systems and digital set top box solutions as well as some functions of the LED intelligent dimmer.

TRANSMISSION TYPE


Infrared

PACKAGE INCLUDES

- 1 x Learnable IR remote control WATERPROOF
- 1 x batteries

RELATED LINKS

[Programming Guide](#)

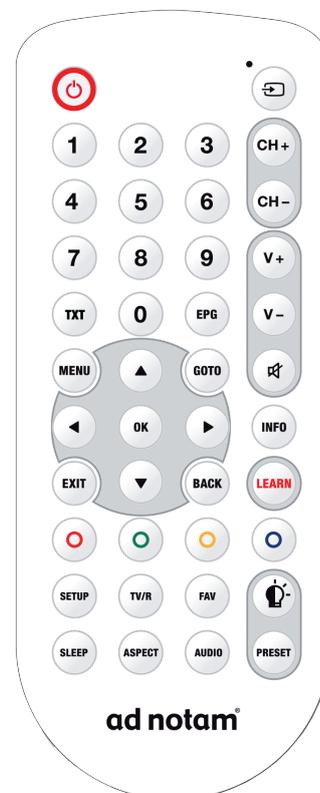

ARTICLE NO.


| Art.No. | Code |
|---------|------|
| ET_ | 555 |

ACCESSORIES

IR REMOTE CONTROL WATERPROOF

KEY ASSIGNMENT

| | |
|---|--|
|  | Switching on / off - in ready operation |
|  | Select signal input |
| Digits 0 - 9 | Select TV program directly ● In the menu: enter numbers |
| CH+ | Switch between TV channels up ● |
| CH- | Switch between TV channels down ● |
| V+ | Increase volume |
| V- | Decrease volume |
| TXT | Open / close teletext ● |
| EPG | Electronic program guide (only DTV channels) ● |
| MENU | Open / close OSD menu ● |
| ▲ | In the menu: cursor up |
| GOTO | GOTO ● |
|  | Mute, sound on / off |
| ◀ | In the menu: cursor left, decrease values |
| OK | OK - confirm selection |
| ▶ | In the menu: cursor right, increase values |
| INFO | Channel information / Operation guide ● |
| EXIT | EXIT |
| ▼ | In the menu: cursor down |
| BACK | Previous channel ● |
| LEARN | Learn individual commands |
|  | In the menu: color buttons ● |
| SETUP | OSD menu of the DFU monitor system |
| TV/R | Switch between TV and radio ● |
| FAV | Open / close favorites list ● |
|  | Dimmer on / off ● |
| SLEEP | Sleeptimer |
| ASPECT | Aspect ratio |
| AUDIO | Select audio mode and audio track ● |
| PRESET | Scene 1 on the Dimmer RCU ● |

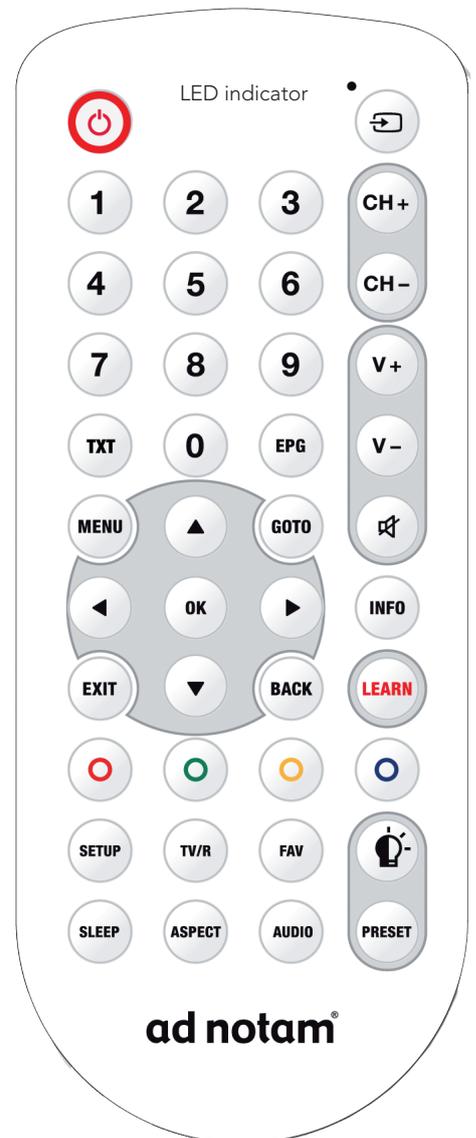

● functions used for ad notam Set Top Box solutions

● functions used for ad notam lighting solutions

NOTE

Observe that the contact clip (+) is connected correctly to the plus pole of the battery. If the contact clip is positioned under the battery, the remote control will not work.

